





Microscent®

Table of Contents

l) Introduction	р.3
-----------------	-----

- II) Technology *p.5*
- III) Precautions p.6
- IV) General Maintenance p.7
- V) Programming *p.8*
- VI) Installation Instructions *p.15*
- VII) Specifications p.16


Introduction

Aero Diffusion Technology® can be applied by 6 different devices that cover every need. The devices have been designed in order to respond to the demands of any project or area. They are fully programmed and ergonomical.

Microscent®

Thanks to its technology, Microscent® can cover up to 60sqm with its ultra-silent technology and works very quietly with a steady mist. The latest and the only cordless Aero Diffusion Technology® device, which is battery operated with its compact size. Works with just one LR20 alkaline battery and has a long battery life.

- Revolutionary, Compact, Small, Minimal
- Environmentally Friendly
- Easy Installation on the floor
- Easy Installation on the Wall
- Fully Programmed
- Adjustable Scent Output
- Fine droplets
- Silent

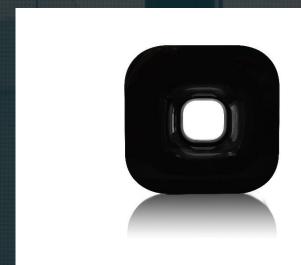

Technology

Aero Cold Diffusion Technology[®] is a safe and clean way to diffuse our unique fragrances to get the most out of them. Instead of using heat, just a fan, or evaporation, all AERO devices use filtered air from your place to diffuse fragrances into an ultra-dry micro mist. This cutting-edge technology has let us for many years now, diffusing our precious scents in their purest form.

EvoScent® Appliance Precautions


- 1. The appliance must be operated in an upright or vertical position. Tilting or flipping the product can cause oil leakage and damage to the product.
- Do NOT immerse the product directly in water or rinse it to avoid short circuit and damage the product.
- 3. NEVER put your nose to the output of Microscent®. Within 12 inches of the output, the fragrance is highly concentrated. The improper inhalation of high concentrations of fragrance may cause irritation in eyes and respiratory.
- 4. Keep the unit in cool place, away from direct sunlight or near heat sources.
- 5. Please do not modify, disassemble or repair the product. If the product fails, please contact our technicians in time.
- 6. Please keep the product out of reach of children. For minors, please use this product under the guidance of an adult.

General Maintenance


Cleaning and maintainance

- 1. Please use a wet towel to clean the unit.
- 2. Please turn the power off when cleaning the inside of unit.
- 3. If the product is not used for a long time, please remove the battery.


- 1) Power ON/OFF
- a. Long press to reconds to turn the power off, the screen will display OFF.

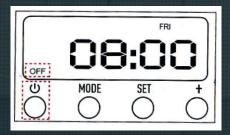


b. Long press to for 2 seconds to turn the power on, the screen will display ON.

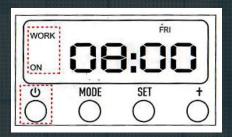

- 2) Pause / Resume Function
 - c. Short press to pause function, the screen will display PAUSE (still available for setup).

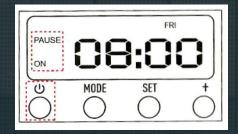


d. Short press 🖰 to resume fuction, the screen display WORK.

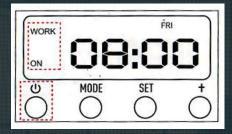


- 3) Work Events (MODE Button) (User can set 3 work events)
 - a. Event 1

Time range 00:00-12:00

(1) Press MODE button to set the starting time of event 1, the screen will display EVENT 1 ON. Press "+" button to set the hour; Long press to speed up

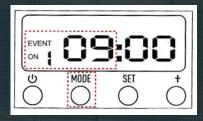


(2)Press MODE button to switch to minute setting, press "+" to set the minute.

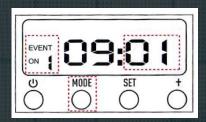

(Continue on page 11)

(3) Press MODE button to set the ending time of event 1, the screen will display EVENT 1 OFF
Time setting is the same as above.

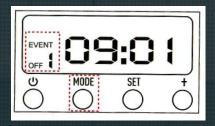

<u>Tips</u>


- a. During Work Events setting, long press MODE button (>2 secs) can restore to factory default setting parameter.
- b. If you dont need 3 events, you can close the event by setting the same time for EVENT ON, and EVENT OFF.
- c. Press 🖰 button to quickly exit.

(Continue from page 10)

b. Event 2

Time range: 12:00-18:00

(1) Press MODE button to set the starting time of event 2, the screen will display EVENT 2 ON Operation is the same as Event 1.

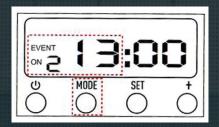


c. Event 3

Time range: 18:00-23.59

(1) Press MODE button to set the starting time of event 3, the screen will display EVENT 3 ON.

Operation is the same as Event 1.

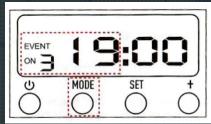


4) Other settings (SET Button)

a. Spray Interval Time Setting

Press SET button to switch to interval time setting, the screen will display INT.

Press "+" button to set the time, the range is 1-90 minute.

TIPS: Long press "SET" button (>2 secs) and the interval time will turn to 01.

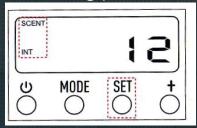


b. Work Period Setting

Press SET button to switch to work period setting, the screen will display WORK.

TIPS: Long press "SET" button (>2 secs), the work period will be MON to SUN, 7 days.

Press "+" button to set the period, you can choose from 3 periods settings: MON to FRI, MON to SAT and MON to SUN.

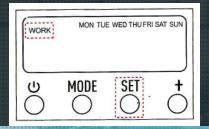

(Continue on page 14)

- c. Current Time and Day Setting
- (1) Press SET button to switch to current time setting, press "+" button to set the time.
- (2) Press SET button to switch to current day setting, press "+" button to set the date.
- (3) Long press "SET" button (>2 seconds), the current time and day will be oo:oo, Monday


Now, all settings are finished and is ready to use, available for tabletop or wall mounting (Check the installation instructions)

(Continue from page 13)

Installation Instructions

Wall mounting with screws:

- a. Take out the mounting plate and mark the screw positions.
- b. Drill 3 holes with 5mm diameter, use screws to fixate the plate to the wall and keep it level.
- c. Mount the unit.
- d. It is recommended to lock the unit by screwing the anti-theft hole which is behind the essential oil bottle.

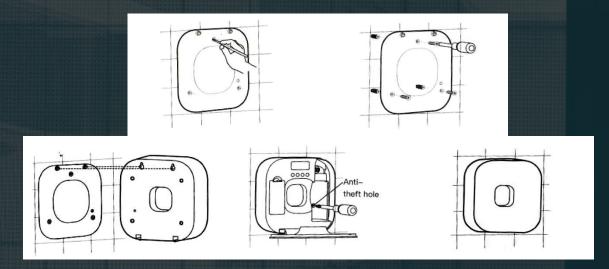

Specifications

MicroScent®

Technical Characteristics

Reference Microscent® Diffuser

Type Cold Evaporation Diffusion device

 $\textbf{Diameter of particles} \hspace{1.5cm} 300 nm \ to \ 1 \mu \ micron$

Power Input

Input 1 X "D" Size Alkaline

Protection Switching power supply

Internal Power DC 1.5V

Performance Up to 60 m² subject to air flow conditions

Control 3 zones programming

Cartridge

Reservoir 100ml

Disposable/Recyclable

Patented Spring Air



